

# **REQUIRED TOOLS FOR INSTALLATION**









### Power Drill / Screwdriver




### Pencil



# **COMES WITH YOUR ORDER**

## **Headrail Brackets**

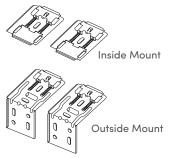

#### **Roller Shade**




## Screws

+ One extra screw provided




# Decor Valance

If Applicable

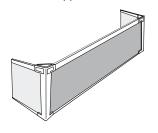


# **HEADRAIL INSTRUCTIONS**

# STEP 1 - BRACKET INSTALLATION

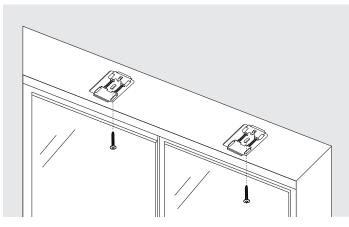

**Inside Mount** 

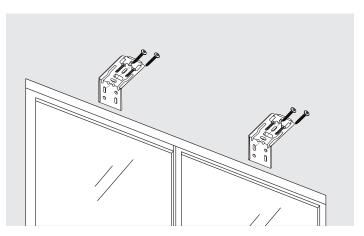


Outside/Wall Mount


Mark the headrail placement on the mounting surface. Install the brackets approximately 3" from either end of the headrail marking (drywall plugs, if required, can be purchased from a local hardware store). Ensure each bracket is level and in alignment with one another.



### **HEADRAIL DIMENSIONS**

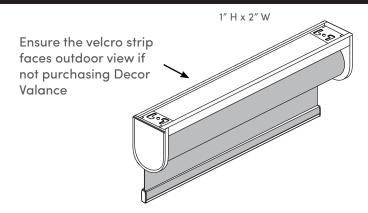


# **STEP 2: MOUNTING THE SHADE**

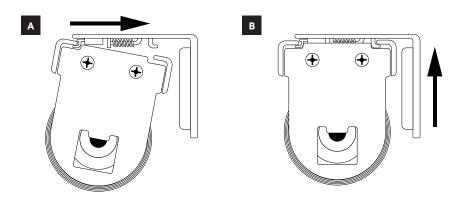

Hook the front of the headrail onto each bracket as shown in (fig.A). Press the spring tab back towards the window and click the headrail into place.

# **STEP 3: DECOR VALANCE (IF APPLICABLE)**

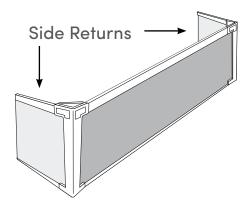

Slide the front and side returns into the corner pieces to assemble the valance, ensuring the velcro is facing the inside of the valance. Align the velcro strip on the back of the valance with the velcro strip on the headrail ensuring the valance is centered and press down firmly.

©06.2023 Elite Window Fashions




#### STEP 4 - APPLIES TO CHAIN OPERATION ONLY

#### CHILD/SAFETY CHAIN TENSIONER INSTALLATION

This device MUST be properly installed in accordance with Health Canada regulations on corded window covering products. Fasten P-Clip against the window frame or wall. Position the P-Clip so it does not interfere with the travel of the shade. Chain should be tight, but not under stress when adhered to the P-Clip. Fasten the P-Clip using screws provided. Do not twist the chain. ChainGuard will rest on P-Clip.


**To operate the chain** slide ChainGuard up and hold, exposing the chain. Use the exposed chain to raise or lower your shade accordingly. Release the ChainGuard to conceal the chain.




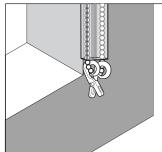





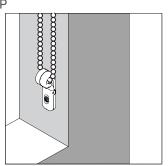

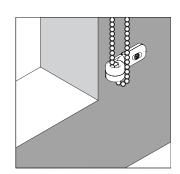

#### **MAINTENANCE & CARE**

Fabrics can be periodically dusted using a soft cloth, feather duster, or vacuum cleaner with brush attachment. If staining does occur, most fabrics can be cleaned using a soft cloth with water or a mild soap detergent. Any detergent or cleaning product should be tested on a small inconspicuous area prior to cleaning the fabric. Do NOT use abrasives or harsh cleansers as they can damage the fabric. Dab with a cloth or towel to prevent water spots and roll shade down to the window sill to allow the fabric to air-dry.

# ⚠ WARNING / MISE EN GARDE

STRANGULATION HAZARD: Young children can be strangled by cords. Immediately remove this product if a cord longer than 22cm or a loop exceeding 44cm around becomes accessible.

RISQUE D'ÉTRANGLEMENT: Les enfants en bas âge peuvent s'étrangler avec des cordes. Enlevez immédiatement ce produit si une corde mesurant plus de 22 cm devient accessible ou si le contour d'une boucle de plus de 44 cm devient accessible.



For french installation instructions, scan the QR code.