

SOMFY RTS

QUICK PROGRAMMING GUIDE FOR SOMFY® RTS MOTORS

Factory Programming Mode

Before You Begin: Steps 1 to 7 must be completed to ensure proper shade programming & functionality. It is recommended to power only the motor being programmed (disconnect power to all other motors). Motor will exit programming mode after 2 minutes of inactivity.

STEP 1: Connect Power: With the motor installed in the shade, connect power to the motor (120V, 12V or 24V Transformer or battery wand).



STEP 2: Initiate Programming: Press both  and  at the **same time** until the motor jogs. **A jog is a brief up and down motion.** In programming mode the motor operates in momentary fashion.



STEP 3: Check Directions: Press  or . When pressing  product should go down or out. To change direction press and hold  (stop) until the motor jogs (shade has a short up and down movement).



STEP 4: Set the Limits: Bring the motor to desired **upper** limit. Press both  (stop) and  until the motor moves, then release (if the motor stops when the buttons are released take it back to the upper limit and repeat). Stop the motor when reaching the desired lower limit. You can adjust by pressing  or .



STEP 5: Set the Limits: Press both  (stop) and  at the **same time** until the motor moves, then release. The motor will stop at the original upper limit.



STEP 6: Confirm Limit Settings: Press and hold  (stop) until the motor jogs to confirm the limit settings.



STEP 7: Set User Mode: Press and hold the programming button on the back of the transmitter until the motor jogs. It will now operate in a maintained fashion (user mode). Double check limit settings as a precaution. For Li-ion rechargeable motors, BRIEFLY press programming button. Motor will jog to indicate successful programming.

User Mode: Adjusting the Limits



To change the lower limit:

Send the motor to its current lower limit. Press both  and  at the same time until the motor jogs. Adjust to a new lower limit position.

To change the upper limit:

Send the motor to its current upper limit. Press both  and  at the same time until the motor jogs. Adjust to a new upper limit position.



To change the lower limit:

Send the motor to its current lower limit. Press  until the motor jogs.

To change the upper limit:

Send the motor to its current upper limit. Press  until the motor jogs.

Setting an Intermediate Position



Setting: Send the shade and stop it at the desired intermediate position by pressing  (stop). Once the intermediate position is reached, press and hold  (stop) until the shade jogs. The intermediate position is now added to memory.



Using: Send the shade to the intermediate position by pressing  (stop) from **any** shade position. **Note:** Shade should be stationary prior to activating intermediate position function.

Note: If the shade is actively moving (invcmotion)  should be pressed twice.

To Delete: Activate shade to intermediate position, then press and hold  (stop) for 5 seconds. Shade will jog to confirm deletion.

SOMFY RTS

QUICK PROGRAMMING GUIDE FOR SOMFY® RTS MOTORS

Adjust Motor Speed (Sonesse 28, 30 and 50 DC models ONLY)



STEP 1: Press and hold    until the motor jogs. Shade will begin to move up and down automatically.

STEP 2: To increase motor speed while shade is in motion, press and hold  until motor jogs. Increase speed as desired. When satisfied, press and hold  to accept new speed.

STEP 3: To decrease motor speed while shade is in motion, press and hold  until motor jogs. Decrease speed as desired. When satisfied, press and hold  to accept new speed.

Adding or Deleting a Remote or a Channel



STEP 1: Using already programmed transmitters, select the transmitter (single channel) or the channel, (1-5) of a multi-channel transmitter.


STEP 2: Press and hold the programming button of that transmitter until the motor jogs.



STEP 3: Select the transmitter (single channel) or the channel, (1-5) of a multi-channel transmitter to be added or deleted.

STEP 4: Press and hold the programming button of the transmitter until the motor jogs. (Unless its a Li-ion motor then press & release immediately)


Resetting R28 WireFree RTS 12V DC Battery Motors

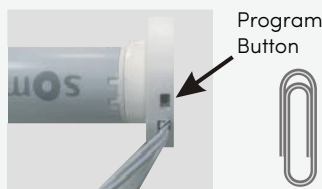

To delete all previous settings and reset the motor to factory mode, use a paperclip to press and hold the PROGRAM BUTTON located at the side of the motor for 3 jogs.

Resetting Sonesse® 30 RTS Motors (24V DC & WireFree models)

30 RTS Motor

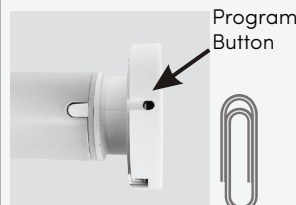

To delete all previous settings and reset the motor to factory mode, use a paperclip to press and hold the PROGRAM BUTTON located at the side of the motor for approximately 12 seconds, during which the motor will jog 3 separate times. All remotes and limits will be erased (motor is now reset to factory mode).


50 RTS Motor




To delete all previous settings and reset the motor to factory mode, use the reset key. Press and hold all 3 PROGRAM BUTTONS located at the side of the motor. Hold for approximately 12 seconds, during which the motor will jog 3 separate times. All remotes and limits will be erased (motor is now reset to factory mode).

Resetting Sonesse® 40 and 50 RTS 120V AC Motors


Perform a dual power cut to delete all previous settings.

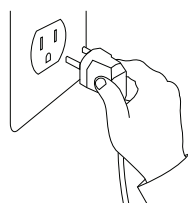


STEP 1: Out 2 Seconds

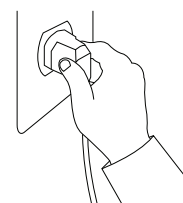

STEP 2: In 10 Seconds

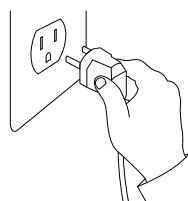

STEP 3: Out 2 Seconds

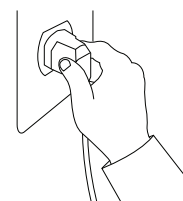

STEP 4: In, motor jogs 1x



STEP 5: Press and hold the PROGRAM BUTTON on your handheld or wall remote until the motor jogs 2x. Release when motor stops jogging.



SOMFY RTS

GUIDE VISUEL DE PROGRAMMATION POUR TOUS LES MOTEURS RTS

Mode de Programmation

Avant de commencer: Les moteurs sont livrés sans réglages de fin de course et sans émetteur en mémoire. Les étapes 1 à 7 doivent être complétées pour que le store fonctionne normalement. S'il y a plusieurs moteur à programmer ne programmez et ne branchez qu'un seul moteur à la fois.
NOTE : Le moteur sortira du mode programmation après 2 minutes d'inactivité.



ÉTAPE 2: Choisissez l'émetteur/canal que vous voulez utiliser. Appuyez sur et simultanément et maintenez jusqu'à ce que le moteur tourne par à-coup. Relâchez les boutons. **Un à-coup est un mouvement de va et vient rapide du moteur.**



ÉTAPE 3: Vérifiez la direction de rotation. Confirmez que le bouton fait remonter le store (le moteur fonctionne de façon momentanée). Sinon pour changer de direction appuyez sur (Arrêt) pendant plus de 5 secondes jusqu'à ce à-coup. Vérifiez la direction.



ÉTAPE 4: Amenez le moteur à la position haute désirée. Appuyez simultanément sur et jusqu'à ce que le moteur descende puis relâchez. Arrêtez le moteur à la position basse désirée. Vous pouvez ajuster si nécessaire en appuyant sur ou .



ÉTAPE 5: Appuyez simultanément sur et jusqu'à ce que le store monte puis relâchez. Le moteur s'arrêtera à la position haute initiale.



ÉTAPE 6: Appuyez sur et maintenez jusqu'à ce que le moteur tourne par à-coup. Ceci confirme le réglage des fins de course.



ÉTAPE 7: Pour passer du mode de programmation au mode d'utilisation appuyez sur le bouton de programmation de l'émetteur/canal que vous désirez utiliser jusqu'à le moteur tourne par à-coup. Relâchez le bouton. Vérifier les réglages par précaution. Pour les moteurs rechargeables Li-Ion appuyez brièvement sur le bouton de programmation. La réussite de la programmation est confirmée par un à-coup du moteur.

Réajustement des positions d'arrêt en mode d'utilisation pour changer la position basse



Pour changer la position basse:

Amenez le moteur à sa position basse actuelle. Appuyez sur et jusqu'à ce que le moteur tourne par à-coup. Choisissez la nouvelle position.

Pour changer la position haute:

Amenez le moteur à sa position haute actuelle. Appuyez sur et jusqu'à ce que le moteur tourne par à-coup. Choisissez la nouvelle position.



Pour changer la position basse:

Appuyez sur jusqu'à ce que le moteur tourne par à-coup.

Pour changer la position haute:

Appuyez sur jusqu'à ce que le moteur tourne par à-coup.

Réglage et utilisation de la position intermédiaire



RÉGLAGE: Mettez le store en mouvement et arrêtez-le à la position intermédiaire désirée en appuyant sur .

Appuyez sur jusqu'à ce que le moteur tourne par à coup. La position intermédiaire est maintenant mémorisée.



UTILISATION: Envoyez le store à sa position intermédiaire en appuyant sur à partir de n'importe quelle position.

NOTE: Si le store est en mouvement il faudra appuyer sur deux fois.

ANNULATION: Pour annuler une position intermédiaire envoyez le store à cette position et appuyez sur jusqu'à ce que le moteur tourne par à coup.

SOMFY RTS

GUIDE VISUEL DE PROGRAMMATION POUR TOUS LES MOTEURS RTS

Ajouter ou supprimer un émetteur ou un canal



ÉTAPE 1: Utilisant un émetteur déjà programmé sélectionnez l'émetteur ou le canal qui contrôle le moteur pour lequel vous voulez ajouter ou supprimer un émetteur ou un canal.


ÉTAPE 2: Appuyez sur le bouton de programmation de cet émetteur jusqu'à ce que le moteur fonctionne par à-coup. Par contre, pour un moteur Li-Ion appuyez et relâchez immédiatement.



ÉTAPE 3: Sélectionnez l'émetteur ou le canal que vous voulez ajouter ou supprimer.


ÉTAPE 4: Appuyez sur le bouton de programmation de cet émetteur jusqu'à ce que le moteur fonctionne par à-coup. Par contre, pour un moteur Li-Ion appuyez et relâchez immédiatement.

Pour effacer la mémoire du moteur WIREFREE™ ROLL UP R-28 TÊTE RONDE

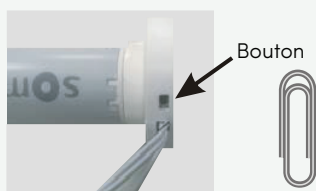

Pour effacer tous les réglages: À l'aide d'un trombone appuyez sur le **bouton de programmation** situé sur la tête du moteur (pendant environ 15 secondes) jusqu'à ce que le moteur tourne par à-coup 3 fois indiquant l'effacement de la mémoire. Pour tout réglage vous devrez recommencer à l'étape 2 du mode programmation de la page précédente.


Pour effacer la mémoire du moteur SONESSE 30™ 24V et WIREFREE™

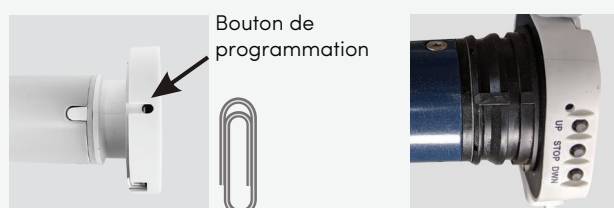


Pour effacer tous les réglages: À l'aide d'un trombone appuyez sur le **bouton de programmation** situé sur la tête du moteur (pendant environ 15 secondes) jusqu'à ce que le moteur tourne par à-coup 3 fois indiquant l'effacement de la mémoire. Pour tout réglage vous devrez recommencer à l'étape 2 du mode programmation de la page précédente.

Pour effacer la mémoire du moteur SONESSE™ 40 et 50 RTS 120V


Double coupure de courant

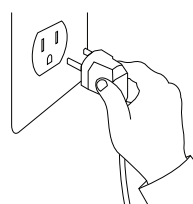


ÉTAPE 1: Retirez 2 sec

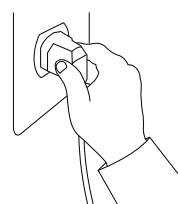

ÉTAPE 2: Insérez 10 sec

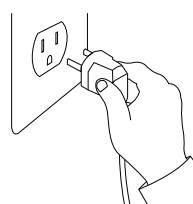

ÉTAPE 3: Retirez 2 sec

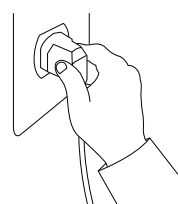

ÉTAPE 4: Le moteur démarre



ÉTAPE 5: Quand le moteur s'arrête appuyez sur le bouton de programmation de l'émetteur jusqu'à ce que le moteur tourne par à-coup **2 fois**. Ne pas relâcher le bouton de programmation avant les 2 à-coups sinon vous devrez recommencer à l'étape 1.