




E-MOTION™ 2.0 QUICK PROGRAMMING GUIDE

STEP 1


On Remote

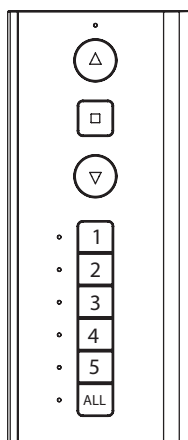

Select a single or multiple channels by toggling channels as required. Note the corresponding LED next to each channel.


STEP 2

On Motor

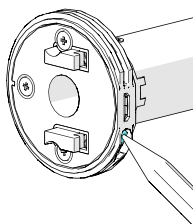

* Internal Tubular pictured. Refer to "P1 Locations" for specific devices

Press the **P1 button** on the motor for **2 seconds** until the motor responds as below

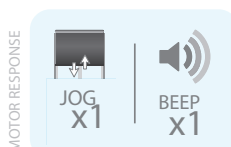


Hold the stop button on the remote for 5 seconds. The motor will respond with Jog twice and Beep 3 times.

STEP 3

Check Direction


Press up or down to check the motor direction. If correct skip to step 5.

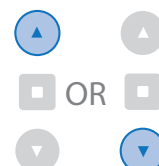

STEP 4

Change Direction


If the shade direction needs to be reversed; press and hold the **up & down arrow together for 5 seconds** until the motor jogs.

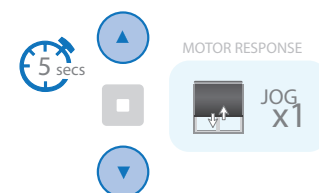

Reversing motor direction using this method is only possible during initial set-up.

STEP 5

Set Upper Limit

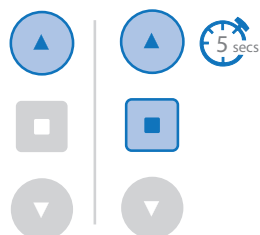


Move shade to desired top limit by pressing the **up arrow** repeatedly. Then press and hold **up & stop together for 5 sec** to save limit.



Tap the arrow several times or hold down if needed; press arrow to stop.

STEP 6

Set Bottom Limit

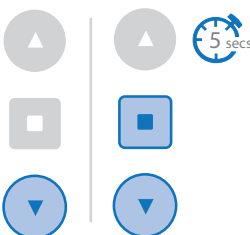


Move shade to desired bottom limit by pressing the **down arrow** repeatedly. Then press and hold **down & stop together for 5 sec** to save limit.




Tap the arrow several times or hold down if needed; press arrow to stop.

STEP 7

Save Your Limit

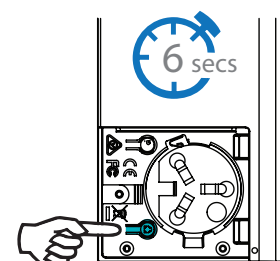

Repeat steps 1-6 for all motors. Once complete **Press and hold the Lock button for 6 sec** while looking at the LED, and hold until solid.

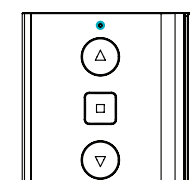


Programming is now complete.

NOTES


- These instructions should be used for new installation or factory reset motors only. Individual steps may not work if you haven't followed the initial setup from the beginning.



E-MOTION™ 2.0 USER GUIDE

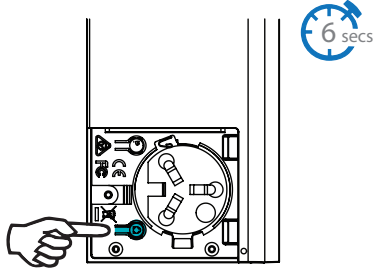


Press and hold the Lock button for 6 sec while looking at the LED, and hold until it's flashing.

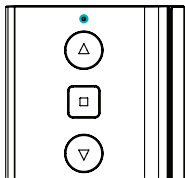


ADD/DELETE CHANNEL

Choose existing channel (to keep) and press P2 on controller.

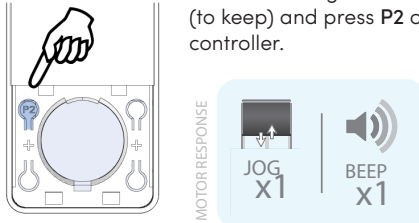


Repeat step once motor has responded

Choose channel you want to add or delete and press P2 on controller.

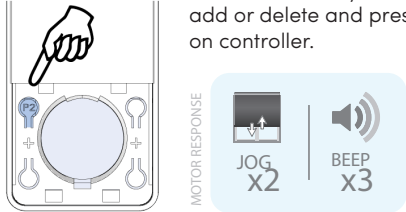


ADJUST UPPER LIMIT

Press and hold **up & stop** together for 5 sec




Move shade to desired upper limit by pressing the **down or up arrow** repeatedly. Then press and hold **up & stop together** for 5 sec to save limit.




ADJUST BOTTOM LIMIT

Press and hold **down & stop** together for 5 sec

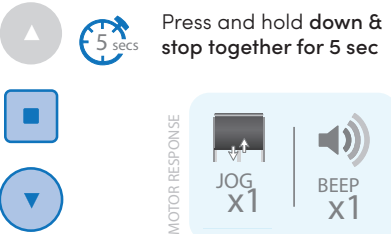


Move shade to desired upper limit by pressing the **up or down arrow** repeatedly. Then press and hold **down & stop together** for 5 sec to save limit.

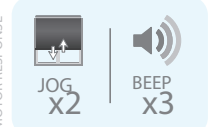


SET/DELETE FAVOURITE POSITION

Press P2 on controller.

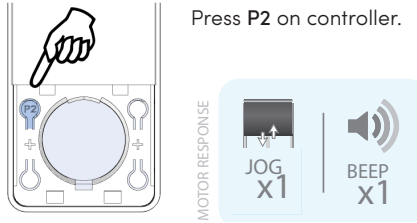

Press **stop** on controller.



Press **stop** on controller.

